



QUALITY ACCESSORIES

1. FEATURES

- | | |
|---------------------------|---------------------------|
| (1) Test button | (6) Receiver sync jack |
| (2) Transmitter LED | (7) Channel select switch |
| (3) Camera hot shoe | (8) Receiver ON/OFF |
| (4) Sync socket | (9) Receiver LED |
| (5) Channel select switch | |

2. SPECIFICATIONS

- 4 channel wireless radio flash trigger
- Max. operation distance: 30 m
- Working frequency 433 MHz.
- Sync speed 1/250 sec.
- Low voltage operation
- Max. Sync voltage 100 V.
- Transmitter battery (included): 23A 12V battery (The battery may be changed by unscrewing the cross recess screw on the bottom side of the transmitter)
- Receiver battery (not included): 2 x AAA battery

3. HOW TO USE THE X SLAVE

- 3.1. Plug the sync jack (6) of the receiver into the sync terminal of your flash unit.
- 3.2. Switch on the receiver with its power switch (8).
- 3.3. Set transmitter and receiver to the same channel with the channel select switches (5) (7).
- 3.4. Press the transmitters' test button (1): The transmitter LED (2) and the receiver LED (9) will light up simultaneously indicating proper operation.
- 3.5. Slip the transmitter into the hot shoe of your camera. Should there be no hot shoe contact, the transmitter may be connected to your camera via the sync cable supplied with the X Slave.

4. PLEASE NOTE!

Keep away from rain and dampness.